The Printer Driver Linux Installation Method

1. All the files will be in an empty folder after driver decompression,

such as picture



2、Press F4 or using start menu to go into the terminal program, then input 1s, and press Enter, such show as in Picture 2, (if different, using CD order to go into the folder then input 1s and press Enter.



3、Driver Installation(./POS-80) show as below picture



Driver Installation finished

4. Printer setting(1. Inputting <u>http://localhost:</u> 631 or <u>http://127.0.0.1:631</u> to browser,
2. Opening the URL link which settled by the printer(remark: alternative)

UNIX PRINTING SYSTEM	Common UNIX Printing Home Administration Classes Documer		
Welcome!			
These web pages allow you to monitor your printers and jobs as we any of the tabs above or on the buttons below to perform a task.			
Help	Add Class Add Printer Manage Classes Manage		
If you are asked for a username and password, enter your username and password.			
Abou	t CUPS		

Add Nev	w Printer Printer name
	(necessary)
Name:	
	(May contain any printable characters except "/", "#", and space)
Location:	
	(Human-readable location such as "Lab 1")
Description:	
	(Human-readable description such as "HP LaserJet with Duplexer")
	Continue Next

5. Choose interface as below:



6. Choose LAN port show as below picture

Device URI for POS-80					
Device URL: socket://192.169.1.240/9100					
Examples:					
http://hostname:631/ipp/ http://hostname:631/ipp/port1	Socket://+IP+:+Port No.				
ipp://hostname/ipp/ ipp://hostname/ipp/port1					
lpd://hostname/queue					
socket://hostname socket://hostname:9100					
See "Network Printers" for the correct URI to use with your printer.					
Continue					

Make/Manufacturer for POS-80



Model/Driver for POS-80				
	Model: POS-80 (en)			
	Choose Printer Model			
Or Provide	e a PPD File:			
Authori 📖	zation Dialog			
R	You need to supply a username and a password to access this site.			
Site:	CUPS at 127.0.0.1			
<u>U</u> sername:				
<u>P</u> assword:				
Passwor	rd <u>K</u> eep password			
	Next			

7. Adding printer successful if below picture appear



Coming below page automatically later, this page is printer parameter setting, can the default configuration, also can be chose according to need as below picture:

POS-80: General					
Media Size: 80mm x 297mm 🔻					
Set Printer Options					
POS-80: Device Settings					
Cash Drawer:	Cash Drawer # 1 Before Printing				
Blank space at page's end:	Do not print				
Feed distance after print:	feed 30mm 💌				
Cutting:	Cut at the end of page				
Beeper:	Beep before every page				
NV Logo:	Do not print NV Logo 💌				
	Set Printer Options				

8、Printing test.



🛓 💷 Configure - KDI	E Control Module	? — — ×				
Add 🛁 Printer 🦃 Print Server 🚬 Print Manager 🦳 View 🕜 Documentation						
POS-80	POS-80 Print to File (PDF)					
Advanced Eaving Tool (keepdfav)						
Mall PDF File	Send to Fax					
Information	Jobs <u>P</u> roperties <u>A</u> I <u>n</u> stances					
POS-80	Choose Printer	ä				
Type: Local pr	rinter					
State: Idle (acc	cepting jobs)					
Location:						
Description:						
URI: ipp://localhost.localdomain:631/printers/POS-80						
Device: socket://192.168.1.240:9100						
Model: POS-80						
Print system currently used: CUPS (Common UNIX Print System)						
	Server: localho	ost:631				
Help Defaults	Sure	OK Apply Cancel				

< End >